T-Series Panel

Salaat Panel

User Manual (with Jamaat Yearly)







Head Office:

Office # 412, 4th Floor, Madina City Mall, Abdullah Haroon Road, Saddar, Karachi, Pakistan.

Tel: +92(21)-35217256, 35654771-74 / Cell 🕓 : +92-3360837535

Index

- New Features	1
- VAR SET	2
- VIEW SET	5
- CITY SET	5
- Remaining Indication of Specific Times	
- SET Adv. (Advance)	7
- JAMAT SET	8
- Namaz Chart Transfer Through Mobile App	9
- Masjid Name Transfer via Mobile App	10
- Yearly Jamat Chart Transfer via Mobile App	11
- TIME SET	12
- HIJRI SET	12
- Jamat Yearly	13
- Jamat Manual	15
- Bulb Option	16
- Panel run with Solar Energy	16

Note: New Remote addition and Panel Unlock settings:

- Press 5 for minimum 3 Seconds to un-lock the Panel.
- Press Iqama then "JAMAT SET" starts blinking. (page # 8)
- Press 5 for minimum 3 Seconds to un-lock the Panel.
- Press Time then "TIME SET" starts blinking. (page # 12)
- Press 5 for minimum 3 Seconds to un-lock the Panel.
- Press Hijri then "HIJRI SET" starts blinking. (page # 12)
- Press 5 for minimum 3 Seconds to un-lock the Panel.
- Press City then "CITY SET" starts blinking. (page # 5)



New Features Addition

 
- Namaz Chart transfer through Mobile App facility.
- Masjid Name transfer through Mobile App facility.
- Yearly Jamat Chart transfer through Mobile App facility.
- Accurate Temperature separate and clear display.
- Sehri and Iftar remaining time display in during Ramzan.





- Voice indication of "TAKBEER" and Namaz name displayed.





- Will be displayed at the time of Jamat and play sound of "QAD QAMATIS SALAH".





- Facility to select 4 Languages (Urdu, Arabic, English and Farsi/Pashto).
- OFFSET Option, set the Minutes in any Salah/Prayers according to your required and then Jamaat time will be calculated automatically.
- Save Electricity by switching to Night Mode.
- Provision of setting all the options ON/OFF.

User Manual

Panel have 6 Menu selections to set different parameters:

- 1. VAR SET
- 2 VIFW SFT
- 3. CITY SET

- 4. SET Adv.
- 5. JAMAT SET
- 6. TIME SET

7. HIJRI SET

Note: First Unlock the Panel to go into any Menu options.

- For this press and hold button Unlock for minimum 3 seconds,
- when this mark appears, then press MENU and
- SET to enter a desired Menu options.

1. UPRESET



Select Display Language:

Urdu, Arabic, English, Pashto/Farsi.

Note: after selection of Pashto / Farsi language, then Panel show Shamsi (Jalali) calendar Date. After selection of Pashto /Farsi language set Gregorian Date. It will set Shamsi (Jalali) calendar automatically.



Select Figah:

HF = Hanffi, SH = Shaffi & H1 = Zoha Kobra (Hanaffi).



Voice Indication:

Set on Check to Voice Indication of "TAKBEER" and "Qat-Qamatis-Salah".



Set on Cross to Off Voice Indication.



To show all Jamat display in Red color except current Jamaat time



Inversion of Color



Sunrise to Ishtrag Duration:

Set on 0 to 25 minutes.



Zawal Duration:

Set at 0 to 20 minutes



To get suitable Zawal duration set few minutes before and after Zawal.

Before Zawal: Set (-ZL) 0 to 10 minutes. After Zawal: Set (+ZL) 0 to 10 minutes.



Slide Delay:Set at 5 to 15 seconds between each slide.



Slide Mode:

✓ **D.MOVE**: Moving Messages.

X D.MOVE : Still (Flip on change).



Nafl Namaz Timings: Set on check to display all Nafl Namaz like Ishraq and Chasht in the slide.

Set on cross to not display in the slide.



Beep Sound Indicates:

When Jamaat Time meets.



Slide stops at Time of Jamat:

To stop moving display during Jamat. Set it 0 to 15 minutes. Display remain still from the start of Jamat time to the set minutes.

Note: Slide remains "Still" for 15 minutes more in Jumma



Jamat Manual or Jamat Yearly:

It allows user to set Jamat times any time by Manually.



It facilitates to enter Jamat Timings for a complete year at a time. Jamat Timings will be changed automatically according to setting throughout the year. Note: See method of "Yearly Jamat" and "Manually Jamat" on page No. 6.



To View more options...



To Set Chasht:

Chasht starts after a quarter of the day passes. Day start time assumed from the Fajr.



Here day start time is taken from Sunrise



The Chasht starts at the same time as Ishraq.



Selection of 2nd or 3rd Juma Jamat in Slide:

Note: After selection of number Juma 2 or 3 then go to "JAMAT SET" option to set its Jamat Timings.



Special Messages:

Will appear on the slide like "EID MUBARAK".

Block special messages in display.



To Save Electricity:

To set Check ON to Save Electricity, mean all display will close except Real Time and Remaining Time of Jamat.



Day Light Saving:

(To set ON/OFF DST) ✓ DST: ON X DST: OFF



To Set 24 or 12 Hours Format:

Set on Check to display 24 Hour mode for all timings. Set on Cross to display 12 Hour mode for all timings



Temperature in Slide:

Set ON to show Temperature in slide.

✓ : ON

X : OFF

2. UIEW

- Press set to enter in the Menu.
- Now you can see all the Start Timings of Azan at a time.

3. The state of th

- First, find the required City code from the given City code list.
- Press (SET) to enter Menu.
- Select Code via +/-. Press set to save.

New City Addition

- If your desired City is not available in the given City List, you may
- add it by setting City Latitude, Longitude and Time Zone. For this
- you have to set City Code 0000 in [City SET] menu option.



- Press SET to enter set mode. Select Code 0000.



- Press SET to enter Latitude, use +/- to set Latitude.



- Press SET to enter Longitude, use +/- to set Long.



- Press set to enter Time Zone (GMT), use to set Time Zone.



- Press set to enter Calculation Method, use to set Method.

Calculation Method

- 00 Method: University of Islamic Science Karachi.

(Fajr Twilight = 18°, Isha Twilight = 18°)

- 01 Method: Islamic Society of North America.

(Fair Twilight = 15°, Isha Twilight = 15°)

- 02 Method: Muslim World League.

(Fajr Twilight = 18°, Isha Twilight = 17°)

- 03 Method: Ummal Qura Comittee.

(Fajr Twilight = 18.5°, Isha Twilight = 90 min after sunset)

- 04 Method: Egyption General Authority.

(Fajr Twilight = 19.5°, Isha Twilight = 17.5°)

- 05 Method: It is used to set Fajr Twilight Angle and Isha Twilight by users choice. First set Fajr Angle (FA) 10.0° to 24.0° and then Isha Angle (IA) 10.0° to 24.0°.





I A = Isha Angle

Remaining Indication of Specific Times



Tahajjud: The 30 minutes remaining countdown starts automatically before of Sunrise.



Sehri: In during Ramzan the Sehri countdown will start except Tahajjud.



Sunrise: The 10 minutes remaining countdown will start automatically.



Zawal: The 10 minutes remaining countdown will start automatically.



Maghrib: The 10 minutes remaining countdown will start automatically before Sunset.



Iftar: In during Ramzan the Iftar countdown will start automatically.



To Enter Namaz Chart:



Namaz chart into Panel, then select / FIX CITY

via +/- and press set , X I starts

blinking. Press +/- then / then starts blinking.

Press SET, WAIT (ITY.... starts blinking.

Its mean you may transfer the Namaz chart through Mobile Application.

Note: See page No. __9__ for more details.

To Enter Masjid Name:



With this option you may display your Masjid name in Slide.

Press SET to select New SCR, X LOADSCR starts blinking. Press + /- then Y thanks starts blinking.

Press starts blinking.

Its mean you may transfer the Masjid Name through Mobile Application.

Note: See page No. 10 for more details.

To Enter Yearly Jamat Chart:



To enter Yearly Jamat data into Panel so then select

starts blinking.

Now you may transfer the Yearly Jamat through Mobile Application.

Note: See page No 11 for more details.

To Changing in Start Timings: (Salah Adjust)



If you need to change in Start Timings then you can do that through this option.



You can change in Start timings from to 60 minutes through +/-.



Start Timings of Namaz:

Set on check to display all Namaz start timings.

Set on cross to not display in slide.

Factory Setting:



If you need to reset all settings, then select



- Press SET to enter Menu.
- Fajr Hour starts blinking. Use +/- to set.
- Press set Minutes.
- Now set one by one all Jamat Times and then Exit.
- Note: EID Jamat Time can be set before 3 days of Eid.

OFFSET Option in JAMAT SET:

- Set Fair hour at 0 then press (SET), minutes start blinking. Set required
- offset time, then Jamat time shows calculated time from starting time.
- Note: If you don't need to display any Jamat time, then set that format

: ". Example: In Fajr Hours press - to select that format ": " and then press SET to Save.

Namaz Chart Transfer Through Mobile App

(Note: We can transfer the Yearly Start Timings of Azan through mentioned below Android Phone App).

Download the app "Panel Salah Table" from to Play store.

Method:

- Tap on "Add File" and select your desired Namaz Chart file.
- Go to "Menu" and tap on the "Connect" to Bloutooth pair between
- Mobile and Panel.
- Go to in Panel [Adv. SET] option and select ✓ Fix (ITY and then
- select / LIII and press set , WAIT (ITY.... starts blinking.
- Tap on "SEND" then [Receiving...] starts blinking in the Panel slide.
- All data will be transferred within 2 to 3 minutes.







Masjid Name Transfer Through Mobile App

(Note: We can write down and display our Masjid name in the Panel Slide through mentioned below Android Phone App).

Download the app "English 887" from to Play store.

Method:

- First write the Masjid name.
- Tap on the "Connect" to Bloutooth pair between Mobile and Panel.
- Tap on the "Send" to transfer.



Yearly Jamat Chart Transfer Through Mobile App

(Note: We can save the Yearly Jamat data through mentioned below Android Phone App).

Download the app "Panel Salana Jamaat" from to Play store.

Method:

- First type the Yearly Jamat Times into Mobile App.
- Pair the Bluetooth Device to send Data
- In the App, Tap on the "Bluetooth icon" to connect with the Panel.
- Bluetooth Icon will be green on connected.
- Now go to in Panel [SET Adv.] option and select



- And press set then MALT DATA starts blinking.
- Now you can transfer the Yearly Jamat data through this App.











- Press SET to enter Menu.
- Seconds start blinking.
- Press + to set the Seconds in 00.
- Press set and + /- to set Time and Date parameters.

7.

To set Date, Month and Year into Hijri Set:

- Press SET to enter Menu.
- Hijri Date starts blinking.
- Use + /- to adjust current Date.
- Press SET , Hijri Month starts blinking.
- Use +/- to adjust current Month.
- Press set , Hijri Year starts blinking.
- Use +/- to adjust current Year.
- Press set , English Date starts blinking.
- If need to changes, then change it or exit.

Yearly Jamat Timings Insertion

Go to [JAMAT SET]. It has 2 types of Settings:

- 1. Jamat Yearly
- 2. Jamat Manual

Note: Go to [VAR SET] to select "Jamat Manual or "Jamat Yearly".

Jamat Yearly:

Now you can feed the Jamat Timings for a whole round the year at once. Jamat Timings will be changed automatically the whole year. In during Ramzan we can change the timing as per our convenience by going to **[VAR SET]** option and select "**Jamat Manual**". After Ramzan we can set it back on "**Jamat Yearly**" again. Data will not lost to set "**Jamat Manualy**".

- A message of change in Jamat Time will be displayed few hours
- earlier in advance.
- Time of any Jamat need to be changed will be changed a day earlier,
- just after half an hour of particular prayer.
- To enter whole year Jamat Timings, just enter the Jamat changing
- data and its timings.
- Before starting entry, prepare a table in the format given below chart.
- Always start entry from 1st January. Generally 1st January timings
- are same as of 31st December.
- Following is the entry limit for each prayer:
- Fajr-48, Zohr-3, Asr-36, Isha-36, Juma-3
- Maghrib time will be Sunset + Offset so needs to set.
- Setting any Prayer time will not affect the timings of other Prayers
- Jamat Timings.

Fajr	Asar	Isha
1 January 7:45	1 January 4:45	1 January 6:48
18 February 8:15	8 February 8:15	31 January 6:45
10 March 8:00	10 March 5:30	10 February 5:30
_	,	,
_	•	,
22 October 8:30	14 October 5:30	8 December 6:35
10 November 7:30	5 November 4:45	16 December 6:40
25 December 7:45	27 December 4:45	26 December 6:45

Zohr	Juma
1:30	1:15

To Enter "Jamat Yearly" Method:

- Go to [JAMAT SET].
- "FAJR JAMAT" will display in slide and Fajr time display in Red color.
- Press MENU to select other prayer timing to feed it data.
- Press set then "Sure Change" starts blinking.
- Press SET to enter or press EXIT to bypass setting.
- Warning: Once you press SET on "Sure Change" then you
- will need to enter data from 1st January to end. And previous
- data will be lost.
- It will display "1st January" and Hour starts blinking.
- Set Hours and Minutes using +/- and SET buttons.
- Now select the next Date of changing.
- Make each entry sequentially, i.e, each entry should be greater than previous one.

- After settings the last Date entry, press MENU to set other prayer table.
- Press EXIT to terminate entry mode.
- "VIEW SET" will be displayed.
- Press set enters the VIEW mode or EXIT to terminate.
- Eid prayer time setting is allowed just 3 days before EID day
- and it will be set manually.

Jamat Jaiza (View):

This option allows to verify all settings of Jamat Yearly timings.


On selecting this option, first the Fajr Jamat Time will start blinking along with its Month and Date. Use for the next changed time with its Date. Use to select any other prayer to view its entered timings.




In this option we can change Jamat Time at any time.

Jamat Manual:

- Press set to enter Menu.
- Fajr Hour starts blinking. Use +/- to set.
- Press set and +/- to set Minutes.
- Now set one by one all Jamat Times and then Exit.
- Note: EID Jamat Time can be set before 3 days of Eid.

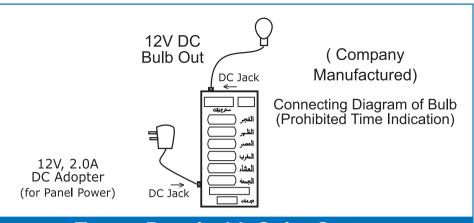

To run Panel with Solar System or Battery backup

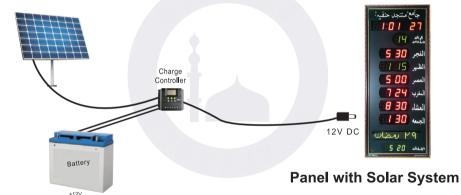

You may now easily run Panel by 12V DC Input with Solar System or Battery. Behind of the Panel, we can separate the DC-Jeck and then we can connect the external 12v DC Input.

External 12v DC Input whether is that the Solar System, Battery or Adapter 12v DV it will work on the Panel.

Warning: Make sure to polarity of DC - Pin, Panel maybe damaged by the wrong connection.



Panel with Battery Backup

Salaat Panel

Different Models

SPT-35F (Folding)

SPT-Home



10x18 Inch

SPT-Mini



11x21 Inch

SPT-Mini Plus



11x24 Inch

SPT-30

14x30 Inch



16x35 Inch

SPT-50F (Folding)



20x50 Inch





Head Office:

Office # 412, 4th Floor, Madina City Mall, Abdullah Haroon Road, Saddar, Karachi-74400, Pakistan.



■ 資料 ■ Tel: +92(21)-35217256, 35654771-74 / Cell 📞:+92-3360837535

Email: info@systemsintegration.com.pk
Url: www.systemsintegration.com.pk

Rawalpindi Service Center:

Office # 104, 1st Floor, Rawal Suaq Plaza, Opposite Steps College, National Market, Chandni Chowk. Whatsapp/Voice: 0306-9787064

Peshawar:

Office Number 37 & 38, 1st Floor,

City Tower Plaza, Kabli Bazar, Cinema Road, Peshawar.

Whatsapp/Voice: 0328-2081799

Lahore:

Shop # 314-G, Panorama Centre, The Mall Road.

Tel: 042-36299705/06

Whatsapp/Voice: 0331-4282515

Multan:

Shop # 38, Multan Commercial Centre, Vehari Road.

Tel: 061-6242323

Whatsapp/Voice: 0334-1757159

Hyderabad:

Shop # 4. Tilak Chari, Op. Aftab Surgical.

Tel: 022-2631434

Whatsapp/Voice: 0331-8368608

www.systemsintegration.com.pk